




SCH25SG SHOOTING GAME GUN FOR SWITCH™ 2

USER MANUAL


WHAT'S IN THE BOX:

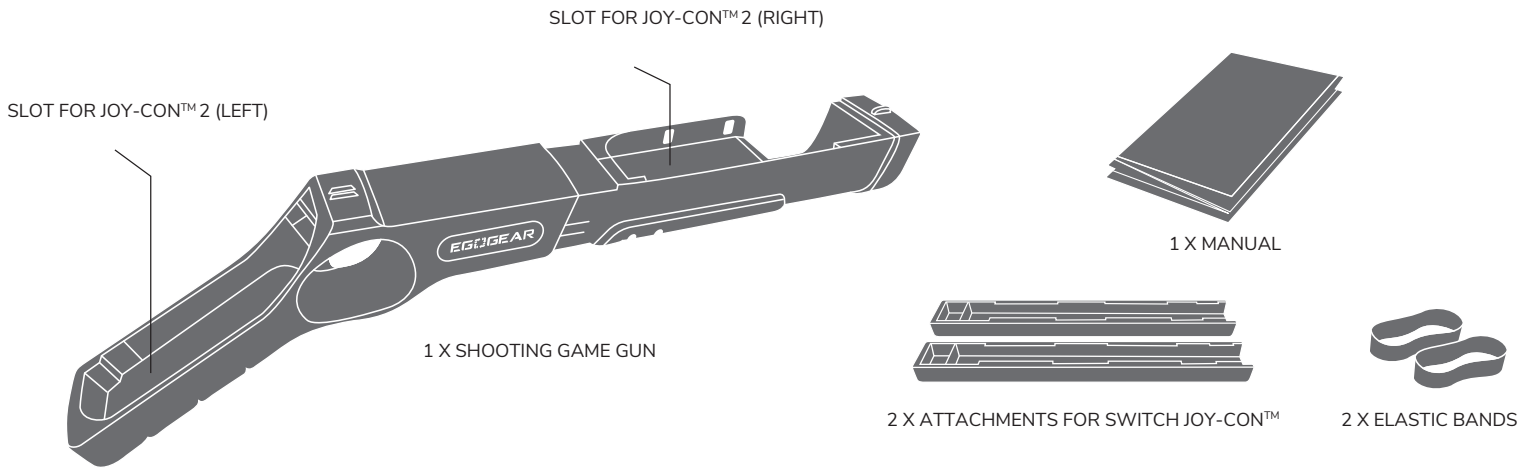

INSTALLATION & USE


FOR SWITCH™ 2

- 1 Gently insert the Joy-Con™ 2 into the slots on the gaming gun.
- 2 You're now ready to play.

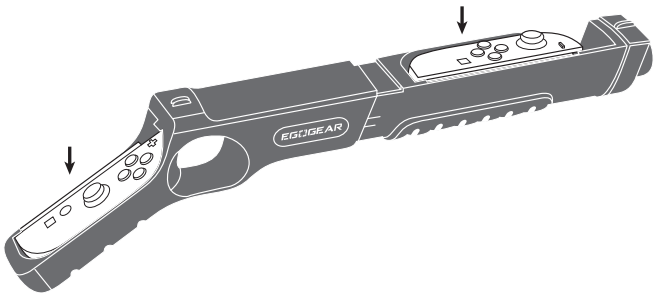

FOR SWITCH™ | SWITCH™ OLED

- 1 First, attach the included adapter to the Joy-Con™.
- 2 Then, slide the Joy-Con™ into the slots on the gaming gun.

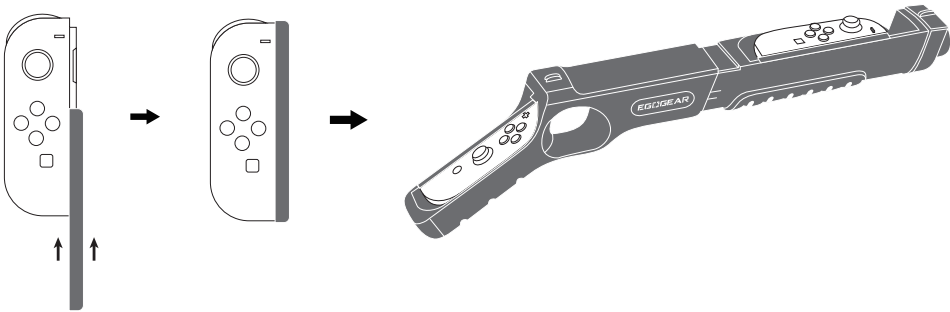

* The use of the elastic band:
The included elastic band helps keep the Joy-Con™ securely in place. Use it if the Joy-Con™ feels loose or to prevent it from falling out during intense gameplay.

